RENLIG

GB

IWM60

Design and Quality
IKEA of Sweden

Contents

Safety information	4	Washing programmes	14
Safety instructions	5	Consumption values	17
Product description	7	Care and cleaning	17
Control panel	8	Troubleshooting	20
First use	10	Technical information	22
Daily use	10	Environment concerns	23
Hints and tips	13	IKEA GUARANTEE	24

Subject to change without notice.

Safety information

Before the installation and use of the appliance, carefully read the supplied instructions. The manufacturer is not responsible if an incorrect installation and use causes injuries and damages. Always keep the instructions with the appliance for future reference.

Children and vulnerable people safety

⚠ **Warning!** Risk of suffocation, injury or permanent disability.

- Do not let persons, children included, with reduced physical sensory, reduced mental functions or lack of experience and knowledge use the appliance. They must have supervision or instruction for the operation of the appliance by a person who is responsible for their safety.
- Do not let children play with the appliance.
- Keep all packaging away from children.
- Keep all detergents away from children.
- Keep children and pets away from the appliance door when it is open.
- If the appliance has a child safety device, we recommend you activate it.

General Safety

- Before maintenance, deactivate the appliance and disconnect the mains plug from the mains socket.
- Do not change the specification of this appliance.

- Obey the maximum load volume of 6 kg (refer to the “Programme chart” chapter).
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- The operating water pressure (minimum and maximum) must be between 0,5 bar (0,05 MPa) and 8 bar (0,8 MPa)
- The ventilation openings in the base (if applicable) must not be obstructed by a carpet.
- The appliance is to be connected to the water mains using the new supplied hose-sets. Old hose sets must not be reused.

⚠ Safety instructions

Installation

- Remove all the packaging and the transit bolts.
- Keep the transit bolts. When you move the appliance again you must block the drum.
- Do not install or use a damaged appliance.
- Do not install or use the appliance where the temperature is less than 0 °C or where it is exposed to the weather.
- Obey the installation instruction supplied with the appliance.
- Make sure that the floor where you install the appliance is flat, stable, heat resistant and clean.
- Do not install the appliance where the appliance door can not be fully opened.
- Always be careful when you move the appliance because it is heavy. Always wear safety gloves.
- Make sure that there is air circulation between the appliance and the floor.
- Adjust the feet to have the necessary space between the appliance and the carpet.

Electrical connection

⚠ **Warning!** Risk of fire and electrical shock.

- The appliance must be earthed.
- Make sure that the electrical information on the rating plate agrees with the power supply. If not, contact an electrician.
- Always use a correctly installed shock-proof socket.
- Do not use multi-plug adapters and extension cables.
- Make sure not to cause damage to the mains plug and to the mains cable. Should the appliance power supply cable need to be replaced, this must be carried out by our Service Centre.
- Connect the mains plug to the mains socket only at the end of the installation. Make sure that there is access to the mains plug after the installation.
- Do not pull the mains cable to disconnect the appliance. Always pull the mains plug.
- Do not touch the mains cable or the mains plug with wet hands.

- Only for UK and Ireland. The appliance has a 13 amp mains plug. If it is necessary to change the fuse in the mains plug, use a 13 amp ASTA (BS 1362) fuse.
- CE
  This appliance complies with the E.E.C. Directives.

Water connection

- Make sure not to cause damage to the water hoses.
- The appliance is to be connected to the water mains using the new supplied hose-sets. Old hose sets must not be reused.
- Before you connect the appliance to new pipes or pipes not used for a long time, let the water flow until it is clean.
- The first time you use the appliance, make sure that there is no leakage.

Use

⚠ **Warning!** Risk of injury, electrical shock, fire, burns or damage to the appliance.

- Use this appliance in a household environment.
- Obey the safety instructions on the detergent packaging.
- Do not put flammable products or items that are wet with flammable products in, near or on the appliance.
- Do not touch the glass of the door while a programme operates. The glass can be hot.
- Make sure that you remove all metal objects from the laundry.
- Do not put a container to collect possible water leakage under the appliance. Contact the Service to ensure which accessories can be used.

Care and Cleaning

⚠ **Warning!** Risk of injury or damage to the appliance.

- Do not use water spray and steam to clean the appliance.
- Clean the appliance with a moist soft cloth. Only use neutral detergents. Do not use abrasive products, abrasive cleaning pads, solvents or metal objects.

Disposal

⚠ **Warning!** Risk of injury or suffocation.

- Disconnect the appliance from the mains supply.
- Cut off the mains cable and discard it.
- Remove the door catch to prevent children and pets to get closed in the appliance.

Service

- Contact the Service to repair the appliance. We recommend only the use of original spare parts.

Product description

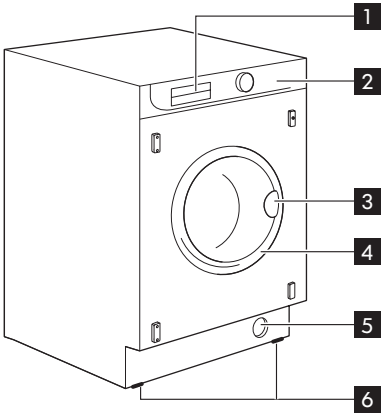

1 Detergent dispenser drawer
2 Control panel
3 Door opening handle
4 Rating Plate
5 Drain pump
6 Adjustable feet

Detergent dispenser drawer

I Compartment for detergent used for prewash and soak phase or for stain remover used during the stain action phase (if available). The prewash and soak detergent is added at the beginning of the wash programme. The stain remover is added during the stain action phase.
II Compartment for powder or liquid detergent used for main wash. If using liquid detergent pour it just before starting the programme.
Compartment for liquid additives (fabric softener, starch).

Follow the product manufacturer's recommendations on quantities to use and do not ever exceed the «MAX» mark in the detergent dispenser drawer. Any fabric softener or starching additives must be poured into the compartment before starting the wash programme.

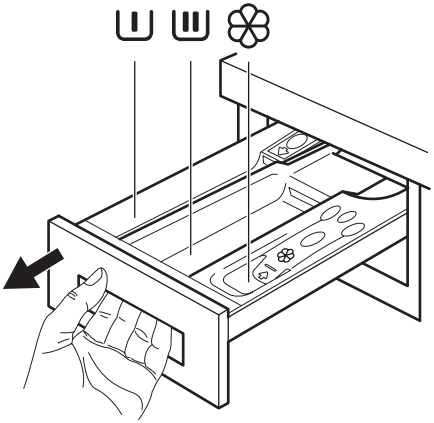

Door safety button

This appliance incorporates a special feature to prevent children and pets becoming trapped inside the drum.

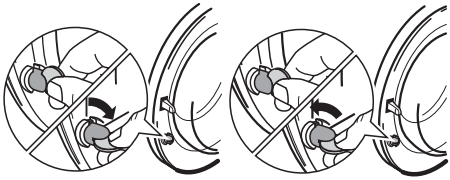

To activate this device, rotate the button clockwise (without pressing it) inside the door until the groove is horizontal. If necessary use a coin.

To disable this device and restore the possibility of closing the door, rotate the button anticlockwise until the groove is vertical.

Control panel

Below is a picture of the control panel. It shows the programme selector dial as well as the buttons and the indicator lights. These are presented by relevant numbers on the following pages.

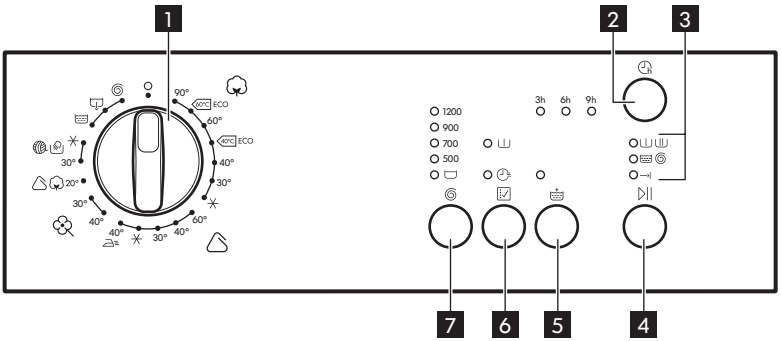

1 Programme selector dial
2 Delay Start button
3 Programme Indicator lights
4 Start/Pause button
5 Extra Rinse button
6 Multi-Functions button
7 Spin reduction button

Programme selector dial	It allows you to switch the appliance On/Off and/or to select a programme.
Delay Start button	This button allows you to delay the start of the programme by 3, 6 or 9 hours.
Programme Indicator lights	When selecting a washing programme both lights 3.1 and 3.2 illuminate. When you have pressed the button 4 the only light corresponding to the running phase stays on. The appliance starts working and the door is locked. The light 3.3 illuminates at the end of the washing cycle. After a few minutes the door can be opened. ⓘ If the draining programme is selected any light will illuminate.
Start/Pause button	This button allows you to start or to interrupt the selected washing programme.
Spin reduction button	By pressing this button you can change the spin speed of the selected programme. • Rinse Hold By selecting this option the water of the last rinse is not emptied out to prevent the fabrics from creasing. Before opening the door it will be necessary to empty out the water. To empty out the water, please read the paragraph «At the end of the programme».
Multi-Functions button:	By pressing this button, you can select only one of the options. The relevant light will light up. • Prewash By selecting this option the appliance performs a prewash cycle before the main wash phase. The washing time will be prolonged. This option is recommended for heavily soiled laundry. • Super Quick By selecting this option the appliance performs a very short cycle for slightly soiled items that have been worn for a short time.
Extra Rinse button	This appliance is designed for saving energy. If it necessary to rinse the laundry using an extra quantity of water (extra rinse), select this option. Some additional rinses will be performed. This option is recommended for people who are allergic to detergents, and in areas where the water is very soft.

Table of symbols	
= On/Off - Reset	= Rinses
= Cottons	= Drain
60°C ECO = Cottons economy at 60° C	= Spin
40°C ECO = Cottons economy at 40° C	= Rinse Hold
= Cold wash	= Prewash
= Synthetics	= Super Quick
= Easy Iron	= Extra Rinse
= Delicates	= Delay Start
20° = Mix 20°	= Main Wash
= Wool	= End Cycle
= Handwash	= Start/Pause

First use

1. Ensure that the electrical and water connections comply with the installation instructions.
2. Remove any material from the drum.
3. Pour 2 liters of water into the main wash compartment of the detergent drawer in order to activate the ECO valve.

Select a cotton cycle at the highest temperature without any laundry in the appliance, to remove any manufacturing residue from the drum and tub.
Pour 1/2 a measure of detergent into the main wash compartment and start the appliance.

Daily use

Open the door

Open the door by carefully pulling the door handle outwards.

Load the laundry

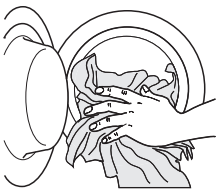

Place the laundry in the drum, one item at a time, shaking them out as much as possible.
By pushing the porthole frame, close firmly the door.

Measure out detergent and fabric softener

1

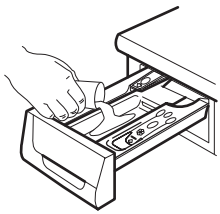

Pour the detergent into the main wash compartment II or in the appropriate compartment if the selected programme/option it requires (see more details in "Detergent dispenser drawer").
To pour the right quantity of the detergent, see more details in "Degrees of water hardness".

1

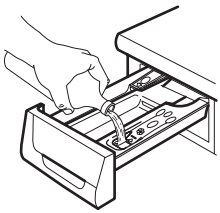

Pour fabric softener into the compartment marked ❀ (must not exceed the «MAX» mark in the drawer).

Close the drawer gently

Select the required programme by turning the programme selector dial (1)

The appliance is now switched on. The indicator light of button 4 starts to blink.
At the end of the programme the selector dial must be turned to position **O**, to switch the appliance off.

ⓘ For the description of each wash cycle, the compatibility among the washing programmes and the options, consult the chapter «Washing Programmes».

⚠ **Caution!** If you turn the programme selector dial to another programme when the appliance is working, the red indicator light of button 4 will blink 3 times to indicate a wrong selection. The appliance will not perform the new selected programme.

Reduce the spin speed by pressing button 7

By selecting a programme, the appliance proposes automatically the maximum spin speed provided for that programme.
Press button 7 repeatedly to change the spin speed, if you want your laundry to be spun at a different speed. The relevant indicator light illuminates.

Select the available options by pressing buttons 7, 6 and 5

Depending on the programme, different functions can be combined. These must be selected after choosing the desired programme and before starting the programme.
When these buttons are pressed, the corresponding indicator lights illuminate. When they are pressed again, the indicator lights go out. If an incorrect option is selected, the integrated red indicator light of the button 4 flashes for 3 times.

ⓘ For the compatibility among the washing programmes and the options see chapter «Washing Programmes».

Select the Delay Start by pressing button 2

Before you start the programme, if you wish to delay the start, press the button 2 repeatedly, to select the desired delay. The relevant light illuminates.
You must select this option after you have set the programme and before you start the programme.
You can cancel or modify the delay time at any moment, before you press button 4.

Selecting the delayed start:
1. Select the programme and the required options.
2. Select the delay start by pressing the button 2.
3. Press button 4:
   – the appliance starts its countdown.
   – The programme will start after the selected delay has expired.

Cancelling the delayed start after having started the programme:
1. Set the washing appliance to PAUSE by pressing button 4.
2. Press button 2 once, the light relevant to the selected delay goes off
3. Press button 4 again to start the programme.

The Delay Start can not be selected with DRAIN programme.

Important! The selected delay can be changed only after selecting the washing programme again.
The door will be locked throughout the delay time. If you need to open the door, you must set the appliance to PAUSE (by pressing the button 4) and then wait a few minutes. After you have closed the door, press the button 4 again.

Start the programme by pressing button 4

To start the selected programme, press the button 4, the corresponding green indicator light stops blinking. The indicator light corresponding to the running phase illuminates. The appliance starts operating and the door is locked.
To interrupt a programme which is running, press the button 4: the corresponding green indicator light starts blinking.
To restart the programme from the point at which it was interrupted, press the button 4 again. If you have chosen a delayed start, the appliance will begin the countdown.
If an incorrect option is selected, the red indicator light of the button 4 blinks 3 times.

Altering an option or a running programme

It is possible to change some options before the programme carries them out.
Before you make any change, you must PAUSE the appliance by pressing the button **4**.
Changing a running programme is possible only by resetting it. Turn the programme selector dial to **O** and then to the new programme position. Start the new programme by pressing the button **4** again. The washing water in the tub will be not emptied out.

Interrupting a programme

Press the button **4** to interrupt a programme which is running, the corresponding green indicator light starts blinking.
Press the button again to restart the programme.

Cancelling a programme

Turn the selector dial to **O** to cancel a programme which is running.
You can select now a new programme.

Opening the door

After the programme has started the door is locked. If, for any reason, you need to open it, set firstly the appliance to PAUSE by pressing the button 4. After a few minutes it will be possible to open the door.
If the door remains locked, this means that the appliance is already heating or that the water level is too high. In any case, do not try to force the door!
If you cannot open the door but you need to open it you have to switch the appliance off by turning the selector dial to **O**. After a few minutes the door can be opened (pay attention to the water level and temperature!).
After closing the door, it is necessary to select the programme and options again and to press button 4.

At the end of the programme

The appliance stops automatically. The indicator light of button 4 and the indicator light corresponding to the just finished washing phase goes off. The light 3.3 illuminates. After a few minutes the door can be opened.

If a programme or an option that ends with water left in the tub has been selected, the light 3.3 illuminates but the door remains locked to indicate that the water must be emptied out before opening the door. During this time the drum continues to turn at regular intervals until water draining. Follow the below instructions to empty out the water:

1. Turn the programme selector dial to **O**.
2. Select the draining or spinning programme.
3. Reduce the spin speed if needed, by pressing the button 7.
4. Press button 4.

At the end of the programme, the door can be now opened. Turn the programme selector dial to **O** to switch the appliance off. Remove the laundry from the drum and carefully check that the drum is empty. If you do not intend to carry out another wash, close the water tap. Leave the door open to prevent any mildew and unpleasant smells.

ⓘ **Stand by**: once the programme has finished the energy saving system is enabled with the pilot lights switched on. By pressing any button the appliance will come out of the energy saving status.

Hints and tips

Sorting out the laundry

Follow the wash code symbols on each garment label and the manufacturer's washing instructions. Sort the laundry as follows: whites, coloureds, synthetics, delicates, woollens.

Removing stains

Stubborn stains may not be removed by just water and detergent. It is therefore advisable to treat them prior to washing.
Blood: treat fresh stains with cold water. For dried stains, soak overnight in water with a stain remover product then rub in the soap and water.
Oil based paint: moisten with benzine stain remover, lay the garment on a soft cloth and dab the stain; treat several times.
Dried grease stains: moisten with turpentine, lay the garment on a soft surface and dab the stain with the fingertips and a cotton cloth.
Rust: oxalic acid dissolved in hot water or a rust removing product used cold. Be careful with rust stains which are not recent since the cellulose structure will already have been damaged and the fabric tends to hole.
Mould stains: treat with bleach, rinse well (white cottons and fast coloureds only).
Grass: soap lightly and treat with bleach (white cottons and fast coloureds only).
Ball point pen and glue: moisten with acetone[1)], lay the garment on a soft cloth and dab the stain.
Lipstick: moisten with acetone as above, then treat stains with methylated spirits. Treat any residual marks with bleach.
Red wine: soak in water and detergent, rinse and treat with acetic or citric acid, then rinse. Treat any residual marks with bleach.
Ink: depending on the type of ink, moisten the fabric first with acetone[1)], then with acetic acid; treat any residual marks on white fabrics with bleach and then rinse thoroughly.
Tar stains: first treat with stain remover, methylated spirits or benzine, then rub with detergent paste.

Degrees of water hardness

Water hardness is classified in so-called "degrees" of hardness. Information on hardness of the water in your area can be obtained from the relevant water supply company, or from your local authority.

1) do not use acetone on artificial silk

Characteristic	Degrees of water hardness	
	German °dH	French °T.H.
Soft	0-7	0-15
Medium	8-14	16-25
Hard	15-21	26-37
Very hard	> 21	> 37

ⓘ A water softener must be added when water has a medium-high degree of hardness. Follow the manufacturer's instructions. The quantity of detergent can then always be adjusted (reduced) to degree of hardness soft.

Washing programmes

ⓘ Please always refer to the care label symbol of your garment and select the washing programme based on what it says.

Programme/ Temperature	Type of laundry	Cycle Description	Max. Load Red. Load[1)]	Available Options	Detergent Compartment
COTTONS 90°-60°	White cotton (heavy-normally soiled items).	Main wash Rinses Max. final spin at 1200 rpm	6 kg 3 kg[1)]	Spin Rinse Hold Prewash Super Quick Extra Rinse	2)
60°C ECO 40°C ECO 3) COTTONS ECONOMY 60°-40°	White and fast coloured cotton economy, lightly-heavy soiled items, shirts, underwear.	Main wash Rinses Max. final spin at 1200 rpm	6 kg	Spin Rinse Hold Prewash Extra Rinse	2)
COTTONS 40°-30°- (Cold)	Coloured cotton (normally-lightly soiled items).	Main wash Rinses Max. final spin at 1200 rpm	6 kg 3 kg[1)]	Spin Rinse Hold Prewash Super Quick Extra Rinse	2)

Programme/ Temperature	Type of laundry	Cycle Description	Max. Load Red. Load[1)]	Available Options	Detergent Compartment
SYNTHETICS 60°-40°-30°- ✳ (Cold)	Synthetic or mixed fabrics: underwear, coloured garments, non-shrink shirts, blouses.	Main wash Rinses Max. final spin at 900 rpm	3 kg 1.5 kg[1)]	Spin Rinse Hold Prewash Super Quick Extra Rinse	2)
EASY IRON 40°	Synthetic fabrics: selecting this programme the laundry is gently washed and spun to avoid any creasing. In this way ironing is easier. Furthermore the appliance will perform additional rinses.	Main wash Rinses Max. final spin at 900 rpm	1.5 kg	Spin Rinse Hold Prewash Extra Rinse	2)
DELICATES 40°-30°	Delicate fabrics: for example curtains.	Main wash Rinses Max. final spin at 700 rpm	3 kg 1.5 kg[1)]	Spin Rinse Hold Prewash Super Quick Extra Rinse	2)
20° 4) MIX 20° 20°	Special programme for cotton, synthetic and mixed fabrics with light soil. Set this programme to decrease the energy consumption.	Main wash Rinses Max. final spin at 900 rpm	3 kg	Spin Rinse Hold Extra Rinse	
WOOL-HANDWASH 30°- ✳ (Cold)	Special programme for wool garments and delicate fabrics bearing the «Pure new wool, non-shrink, appliance washable» and «hand washing» labels.	Main wash Rinses Max. final spin at 900 rpm	2 kg	Spin Rinse Hold	

Programme/ Temperature	Type of laundry	Cycle Description	Max. Load Red. Load[1)]	Available Options	Detergent Compartment
RINSES	With this programme it is possible to rinse and spin cotton garments which have been washed by hand. The appliance performs some rinses, followed by a final long spin. The spin speed can be reduced.	Rinses Max. final spin at 1200 rpm	6 kg	Spin Rinse Hold Extra Rinse	❀
DRAIN	For emptying out the water of the last rinse in programmes with the Rinse Hold option selected.	Draining of water	6 kg		
SPIN	Separate spin for hand washed garments and after programmes with the Rinse Hold option selected. You can choose the spin speed by pressing the relevant button to adapt it to the fabrics to be spun.	Max. final spin at 1200 rpm	6 kg	Spin	

1) If you select the SUPER QUICK option, we recommend you, to reduce the maximum load as indicated. (Red. load = reduced load). Full loading is possible however with somewhat reduced cleaning results.

2) If using liquid detergents, a programme without PREWASH must be selected.

*3) **STANDARD PROGRAMMES for the Energy Label consumption values.** According to regulation 1061/2010, these programmes are respectively the «standard 60° C cotton programme» and the «standard 40° C cotton programme». They are the most efficient programmes in terms of combined energy and water consumption for washing normally soiled cotton laundry.*
Set this programme to have a good washing results and decrease the energy consumption. The time of the washing programme is extended.

The water temperature of the washing phase may differ from the temperature declared for the selected programme.

4) Make sure that the detergent is for low temperature in order to have good washing results.

Consumption values

ⓘ The data of this table are approximate. Different causes can change the data: the quantity and type of laundry, the water and ambient temperature.

Programmes	Load (kg)	Energy consumption (kWh)	Water consumption (litre)	Approximate programme duration (minutes)	Remaining moisture (%)[1)]
Cottons 60 °C	6	1.35	59	150	53
Cottons 40 °C	6	0.85	59	140	53
Synthetics 40 °C	3	0.55	42	90	35
Delicates 40 °C	3	0.55	57	65	35
Wool/Hand wash 30 °C	2	0.25	55	60	30
Standard cotton programmes					
Standard 60 °C cotton	6	1.03	46	159	53
Standard 60 °C cotton	3	0.77	38	135	53
Standard 40 °C cotton	3	0.64	38	129	53

1) At the end of spin phase.

Off Mode (W)	Left On Mode (W)
0.10	0.98
The information given in the charts above are in compliance with the EU Commission regulation 1015/2010 implementing directive 2009/125/EC.	

Care and cleaning

⚠ **Warning!** Switch the appliance off before you carry out any cleaning or maintenance work.

Maintenance Wash

With the use of low temperature washes it is possible to get a build up of residues inside the drum.
We recommend that a maintenance wash be performed on a regular basis.
To run a maintenance wash:

- The drum should be empty of laundry.
- Select the hottest cotton wash programme.
- Use a normal measure of detergent, must be a powder with biological properties.

Cleaning the dispenser drawer and the drawer recess

1

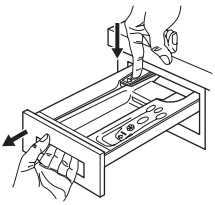

To remove the drawer, press the catch downwards and pull it out.

2

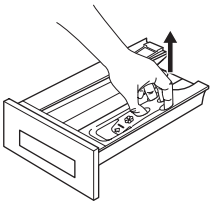

To aid cleaning, remove also the top part of the additive compartment.

3

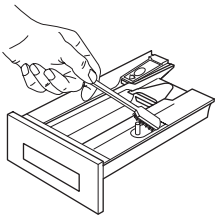

Use a stiff brush to clean and remove all washing powder residue.

4

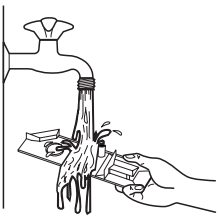

Flush out all the removed parts of the dispenser drawer under a tap to remove any traces of accumulated powder.

5

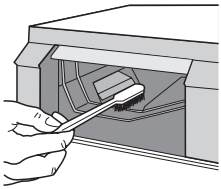

Use the previous brush to clean the recess, ensuring that upper and lower part of it is well cleaned.
After having cleaned the dispenser and the drawer recess, replace it and run a rinse programme without any laundry in the drum to flush away any residue.

Cleaning the pump

Proceed as follows:

1

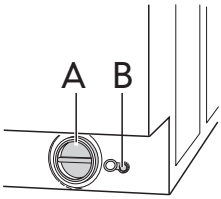

Place a container close to the pump (A), to collect any spillage.

2

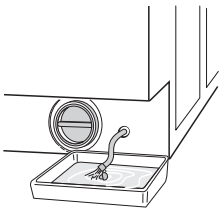

Pull out the emergency emptying hose (B), place it in the container and remove its cover cap.

3

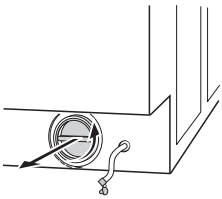

When no more water comes out, unscrew the pump cover (A) and remove it. Always keep a rag nearby to dry up spillage of water when removing the pump.

4

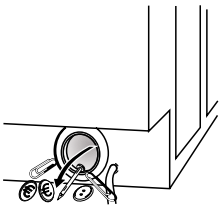

Remove any objects from the pump impeller by rotating it.

5

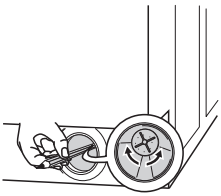

Use a pencil to check whether the pump wheel right at the back of the pump housing can turn. (It is normal for the pumping wheel to turn jerkily.) If the pumping wheel cannot be turned, please contact the After Sales Service.

6

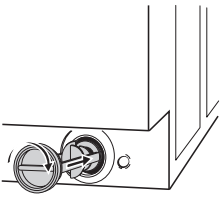

Put the cap back on the emergency emptying hose and place the latter back in its seat. Screw the pump fully in.

Cleaning the water inlet filters

If the appliance takes long to fill with water or doesn't fill, the starting button indicator light blinks in red. Check if the water inlet filters are blocked (see chapter "What to do if..." for more details).
Proceed as follows:

1

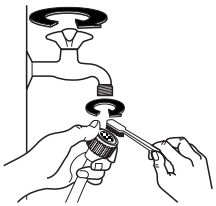

- Turn off the water tap.
- Unscrew the hose from the tap.
- Clean the filter in the hose with a stiff brush.
- Screw firmly the inlet hose back onto the tap.

2

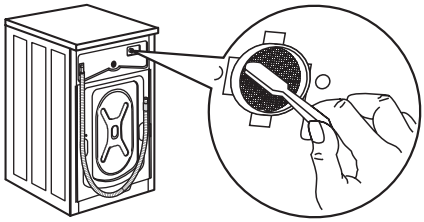

- Unscrew the hose from the appliance. Keep a rag nearby because some water may flow.
- Clean the filter in the valve with a stiff brush or with the piece of cloth.

3

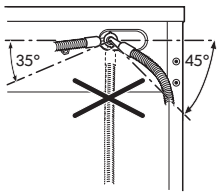

- Screw the hose back to the appliance turning it to the left or the right to suit the installation. Tight the locknut correctly to prevent water leaks.
- Turn on the water tap.

The dangers of freezing

If the appliance is exposed to temperatures below 0°C, certain precautions should be taken.

- Turn off the water tap.
- Unscrew the inlet hose.
- Place the end of the emergency emptying hose and that of the inlet hose in a bowl placed on the floor and let water drain out.

- Screw the water inlet hose back on and reposition the emergency emptying hose after having put the cap on again.
- When you intend to start the appliance up again, make sure that the room temperature is above 0°C.

Important! Every time you drain the water through the emergency emptying hose you must pour 2 litres of water into the main wash compartment of the detergent drawer and then run the drain programme. This will activate the ECO VALVE device avoiding that part of the detergent remains unused at next washing.

Emergency emptying out

If the water is not discharged, proceed as follows to empty out the appliance:

- pull out the plug from the power socket;
- close the water tap;
- if necessary, wait until the water has cooled down;
- open the pump door;
- place a bowl on the floor and place the end of the emergency emptying hose into the bowl. Remove its cap. The water should drain by gravity into the bowl. When the bowl is full, put the cap back on the hose. Empty the bowl. Repeat the procedure until water stops flowing out;
- clean the pump if necessary as previously described;
- replace the emergency emptying hose in its seat after having plugged it;
- screw the pump cover again and close the door.

Troubleshooting

The appliance does not start or stops during operation. It is possible that the red indicator light of button 4 blinks to indicate that the appliance is not working.

Before contacting your local Service Centre, please carry out the checks listed below.

Problem	Possible cause	Solution
The appliance does not start:	The door has not been closed (The red indicator light of button 4 blinks).	Close the door firmly.
	The plug is not properly inserted in the power socket.	Insert the plug into the power socket.
	There is no power at the socket.	Please check your domestic electrical installation.
	The main fuse has blown.	Replace the fuse.
	The programme selector dial is not correctly positioned and the button 4 has not been pressed.	Please turn the selector dial and press the button 4 again.
	The delay start has been selected.	If the laundry are to be washed immediately, cancel the delay start.
The appliance does not fill:	The water tap is closed The red indicator light of button 4 blinks).	Open the water tap.
	The inlet hose is squashed or kinked (The red indicator light of button 4 blinks).	Check the inlet hose connection.

Problem	Possible cause	Solution
	The filter in the inlet hose or the inlet valve filter are blocked (The red indicator light of button 4 blinks).	Clean the water inlet filters. (See "Cleaning the water inlet filters" for more details).
	The door is not properly closed (The red indicator light of button 4 blinks).	Close the door firmly.
The appliance does not empty:	The drain hose is squashed or kinked (The red indicator light of button 4 blinks).	Check the drain hose connection.
	The drain filter is clogged (The red indicator light of button 4 blinks).	Clean the drain filter.
	An option or a programme that ends with the water still in the tub or a that eliminates all the spinning phases has been selected.	Select the draining or spinning programme.
The appliance spinning phase starts late or does not start:	The electronic unbalance detection device has cut in because the laundry is not evenly distributed in the drum. The laundry is redistributed by reverse rotation of the drum. This may happen several times before the unbalance disappears and normal spinning can resume. If, after 10 minutes, the laundry is still not evenly distributed in the drum, the appliance will not spin.	Redistribute the load manually or load more laundry and select the spin programme.
There is water on the floor:	Too much detergent or unsuitable detergent (creates too much foam) has been used.	Reduce the detergent quantity or use another one.
	Check whether there are any leaks from one of the inlet hose fittings. It is not always easy to see this as the water runs down the hose; check to see if it is damp.	Check the water inlet hose connection.
	The drain or inlet hose is damaged.	Replace it with a new one (check with the After Sales Service the right spare part number).
	The cap on the emergency emptying hose has not been replaced or the filter has not been properly screwed in after cleaning action.	Refit the cap on the emergency emptying hose or screw the filter fully in.

Problem	Possible cause	Solution
The door will not open:	The programme is still running.	Wait the end of washing cycle.
	The door lock has not been released.	Wait a few minutes before opening the door.
	There is water in the drum.	Select drain or spin programme to empty out the water.
The appliance produces an unusual noise	The transit bolts and packing have not been removed.	Check the correct installation of the appliance.
	The support feet have not been adjusted	Check the correct levelling of the appliance.
	The drain pump could be blocked.	Check the drain pump. (See "Cleaning the pump" for more details).
Unsatisfactory washing results:	Too little detergent or unsuitable detergent has been used.	Increase the detergent quantity or use another one.
	Stubborn stains have not been treated prior to washing.	Use commercial products to treat the stubborn stains.
	The correct temperature was not selected.	Check if you have selected the correct temperature.
	Excessive laundry load.	Reduce the laundry load in according to the "Washing Programmes table".

After the check, switch on the appliance and press the button 4 to restart the programme.
If the malfunction shows again, contact your After Sales Service.

The necessary data for the service centre is on the rating plate. We recommend that you write the data here:

Model description (MOD): .....

Product number (PNC): .....

Serial number (S.N.): .....

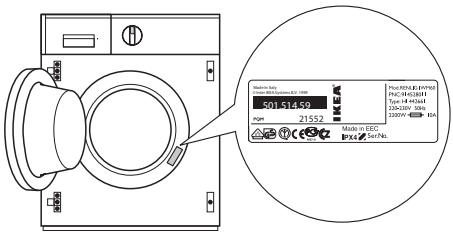

Technical information

Dimensions	Width (cm)	59,6
	Height (cm)	82

	Depth (cm)	54,4 max.
Water supply pressure[1)]	Minimum Maximum	0,5 bar (0,05 MPa) 8 bar (0,8 MPa)
Cotton max. load (kg)	6	
Max. spin speed (rpm)	1200	
Energy class	A+	
Washing class	A	
Spinning class	B	
Washing noise (dB(A))	56	
Spinning noise (db(A))	72	
Average annual energy consumption (kWh)[2)]	192	
Average annual water consumption (litres)[2)]	8699	

1) If the pressure in your area is lower or higher, please contact your After Sales Service.
2) The data is based on the Standard Cotton programmes for test institutes assuming 200 cycles per a year.

Information on the electrical connection, voltage and overall power is given on the rating plate, on the inner edge of the appliance door.

Environment concerns

Recycle the materials with the symbol ♺. Put the packaging in applicable containers to recycle it.
Help protect the environment and human health and to recycle waste of electrical and electronic appliances. Do not dispose appliances marked with the symbol with the household waste. Return the product to your local recycling facility or contact your municipal office.

Packaging materials

The materials with the symbol ♺ are recyclable. Dispose the packaging in a suitable collection containers to recycle it.

Disposal of the appliance

- To prevent the risk of physical injury or damage:
  – Disconnect the mains plug from the mains socket.
  – Cut off the mains cable and discard it.
  – Discard the door catch. This prevents children or small animals from being closed inside of the appliance. There is a risk of suffocation.

IKEA GUARANTEE

How long is the IKEA guarantee valid?
This guarantee is valid for five (5) years from the original date of purchase of Your appliance at IKEA, unless the appliance is named LAGAN in which case two (2) years of guarantee apply. The original sales receipt is required as proof of purchase. If service work is carried out under guarantee, this will not extend the guarantee period for the appliance,

Which appliances are not covered by the IKEA five (5) years guarantee?
The range of appliances named LAGAN and all appliances purchased in IKEA before 1st of August 2007

Who will execute the service?
IKEA service provider will provide the service through its own service operations or authorized service partner network.

What does this guarantee cover?
The guarantee covers faults of the appliance, which have been caused by faulty construction or material faults from the date of purchase from IKEA. This guarantee applies to domestic use only. The exceptions are specified under the headline "What is not covered under this guarantee?" Within the guarantee period, the costs to remedy the fault e.g. repairs, parts, labour and travel will be covered, provided that the appliance is accessible for repair without special expenditure. On these conditions the EU guidelines (Nr. 99/44/EG) and the respective local regulations are applicable. Replaced parts become the property of IKEA.

What will IKEA do to correct the problem?
IKEA appointed service provider will examine the product and decide, at its sole discretion, if it is covered under this guarantee. If considered covered, IKEA service provider or its authorized service partner through its own service operations, will then, at its sole discretion, either repair the defective product or replace it with the same or a comparable product.

What is not covered under this guarantee?
- Normal wear and tear.
- Deliberate or negligent damage, damage caused by failure to observe operating instructions, incorrect installation or by connection to the wrong voltage, damage caused by chemical or electro-chemical reaction, rust, corrosion or water damage including but not limited to damage caused by excessive lime in the water supply, damage caused by abnormal environmental conditions.
- Consumable parts including batteries and lamps.
- Non-functional and decorative parts which do not affect normal use of the appliance, including any scratches and possible color differences.
- Accidental damage caused by foreign objects or substances and cleaning or unblocking of filters, drainage systems or soap drawers.
- Damage to the following parts: ceramic glass, accessories, crockery and cutlery baskets, feed and drainage pipes, seals, lamps and lamp covers, screens, knobs, casings and parts of casings. Unless such damages can be proved to have been caused by production faults.
- Cases where no fault could be found during a technician's visit.
- Repairs not carried out by our appointed service providers and/or an authorized service contractual partner or where non-original parts have been used.
- Repairs caused by installation which is faulty or not according to specification.
- The use of the appliance in a non-domestic environment i.e. professional use.

- Transportation damages. If a customer transports the product to their home or other address, IKEA is not liable for any damage that may occur during transport. However, if IKEA delivers the product to the customer's delivery address, then damage to the product that occurs during this delivery will be covered by this guarantee.
- Cost for carrying out the initial installation of the IKEA appliance. However, if an IKEA service provider or its authorized service partner repairs or replaces the appliance under the terms of this guarantee, the service provider or its authorized service partner will re-install the repaired appliance or install the replacement, if necessary.

This restriction do not apply to fault-free work carried out by a qualified specialist using our original parts in order to adapt the appliance to the technical safety specifications of another EU country.

How country law applies

The IKEA guarantee gives You specific legal rights, which covers or exceed local demands. However these conditions do not limit in any way consumer rights described in the local legislation

Area of validity

For appliances which are purchased in one EU country and taken to another EU country, the services will be provided in the framework of the guarantee conditions normal in the new country. An obligation to carry out services in the framework of the guarantee exists only if the appliance complies and is installed in accordance with:

- the technical specifications of the country in which the guarantee claim is made;
- the Assembly Instructions and User Manual Safety Information;

The dedicated After Sales Service for IKEA appliances:

Please do not hesitate to contact IKEA After Sales Service to:

1. make a service request under this guarantee;
2. ask for clarification on installation of the IKEA appliance in the dedicated IKEA kitchen furniture. The service won't provide clarifications related to:
   – the overall IKEA kitchen installation;
   – connections to electricity (if machine comes without plug and cable), to water and to gas since they have to be executed by an authorized service engineer.
3. ask for clarification on user manual contents and specifications of the IKEA appliance.

To ensure that we provide you with the best assistance, please read carefully the Assembly Instructions and/or the User Manual section of this booklet before contacting us.

How to reach us if You need our service

Please refer to the last page of this manual for the full list of IKEA appointed contacts and relative national phone numbers.

Important! In order to provide You with a quicker service, we recommend that You use the specific phone numbers listed at the end of this manual. Always refer to the numbers listed in the booklet of the specific appliance You need an assistance for. Before calling us, assure that You have to hand the IKEA article number (8 digit code) for the appliance of which you need our assistance.

Important! SAVE THE SALES RECEIPT! It is Your proof of purchase and required for the guarantee to apply. Note that the receipt reports also the IKEA article name and number (8 digit code) for each of the appliances you have purchased.

Do You need extra help?
For any additional questions not related to After Sales of your appliances, please contact our nearest IKEA store call centre. We recommend you read the appliance documentation carefully before contacting us.

Country	Phone number	Call Fee	Opening time
België	070 246016	Binnenlandse gesprekskosten	8 tot 20 Weekdagen
Belgique		Tarif des appels nationaux	8 à 20. En semaine
България	00359 888 16 0 8	Такса за повикване от страната	От 9 до 18 ч в работни дни
Česká republika	246 019721	Cena za místní hovor	8 až 20 v pracovních dnech
Danmark	70 15 09 09	Landstakst	man.-fre. 09.00-20.00 lør. 09.00-16.00 1 søndag pr. måned, normalt første søndag i måneden
Deutschland	+49 1806 33 45 32*	* 0,20 € / Verbindung aus dem Festnetz max. 0,60 € / Verbindung aus dem Mobilfunknetz	8 bis 20 Werktage
Ελλάδα	211 176 8276	Υπεραστική κλήση	8 έως 20 κατά τις εργάσιμες ημέρες
España	91 1875537	Tarifa de llamadas nacionales	De 8 a 20 en días laborables
France	0170 36 02 05	Tarif des appels nationaux	9 à 21. En semaine
Hrvatska	01 63 23 338	Lokalna cijena poziva	pon. - pet. 8:00 - 16:00
Ireland	0 14845915	National call rate	8 till 20 Weekdays
Ísland	5880503	Innanlandsgjald fyrir síma	9 til 18. Virka daga
Italia	02 00620818	Tariffa applicata alle chiamate nazionali	dalle 8 alle 20 nei giorni feriali
Κυπρος	22 030 529	Υπεραστική κλήση	8 έως 20 κατά τις εργάσιμες ημέρες
Lietuva	5 230 06 99	Nacionalinių pokalbių tarifai	Pr. - Ketv.: 8:00 - 12:00, 12:45 - 17:00 Pnkt.: 8:00 - 12:00, 12:45 - 15:45
Magyarország	061 998 0549	Belföldi díjszabás	Hétköznap 8 és 10 óra között
Nederland	0900 235 45 32 and/or 0900 BEL IKEA	0,10 EUR/min (niet lokaal)Incl. BTW	ma-vr 9.00-21.00 zat 9.00-20.00 zon 9.00-18.00
Norge	815 22052	Takst innland	8 til 20 ukedager
Österreich	0810 300486	zum Ortstarif	8 bis 20 Werktage
Polska	012 297 8787	Stawka wg taryfy krajowej	Od 8 do 20 w dni robocze
Portugal	211557985	Chamada Nacional	9 às 21. Dias de Semana *excepto feriados
România	021 211 08 88	Tarif apel național	8 - 20 în zilele lucrătoare
Россия	8 495 6662929	Действующие телефонные тарифы	с 8 до 20 по рабочим дням Время московское
Schweiz	031 5500 324	Tarif für Anrufe im Bundesgebiet	8 bis 20 Werktage
Suisse		Tarif des appels nationaux	8 à 20. En semaine
Svizzera		Tariffa applicata alle chiamate nazionali	dalle 8 alle 20 nei giorni feriali
Slovensko	(02) 3300 2554	Cena vnútroštátneho hovoru	8 až 20 v pracovných dňoch
Suomi	030 6005203	Lankapuhelinverkosta 0,0835€/puhelu+0,032€/min Matkapuhelinverkosta 0,192€/min	arkipäivisin 8.00-20.00
Sverige	0775 700 500	lokalsamtal (lokal taxa)	mån-fre 8.30-20.00 lör-sön 9.30-18.00
Türkiye	212 244 0769	Ulusal arama ücreti	Hafta içi saat 09:00'dan 18:00'a kadar
Україна	044 586 2078	Міжміські дзвінки платні	9 - 21 В робочі дні
United Kingdom	020 3347 0044	National call rate	9 till 21. Weekdays

132917181-A-212013

CE

© Inter IKEA Systems B.V. 2008

AA-784854-2